


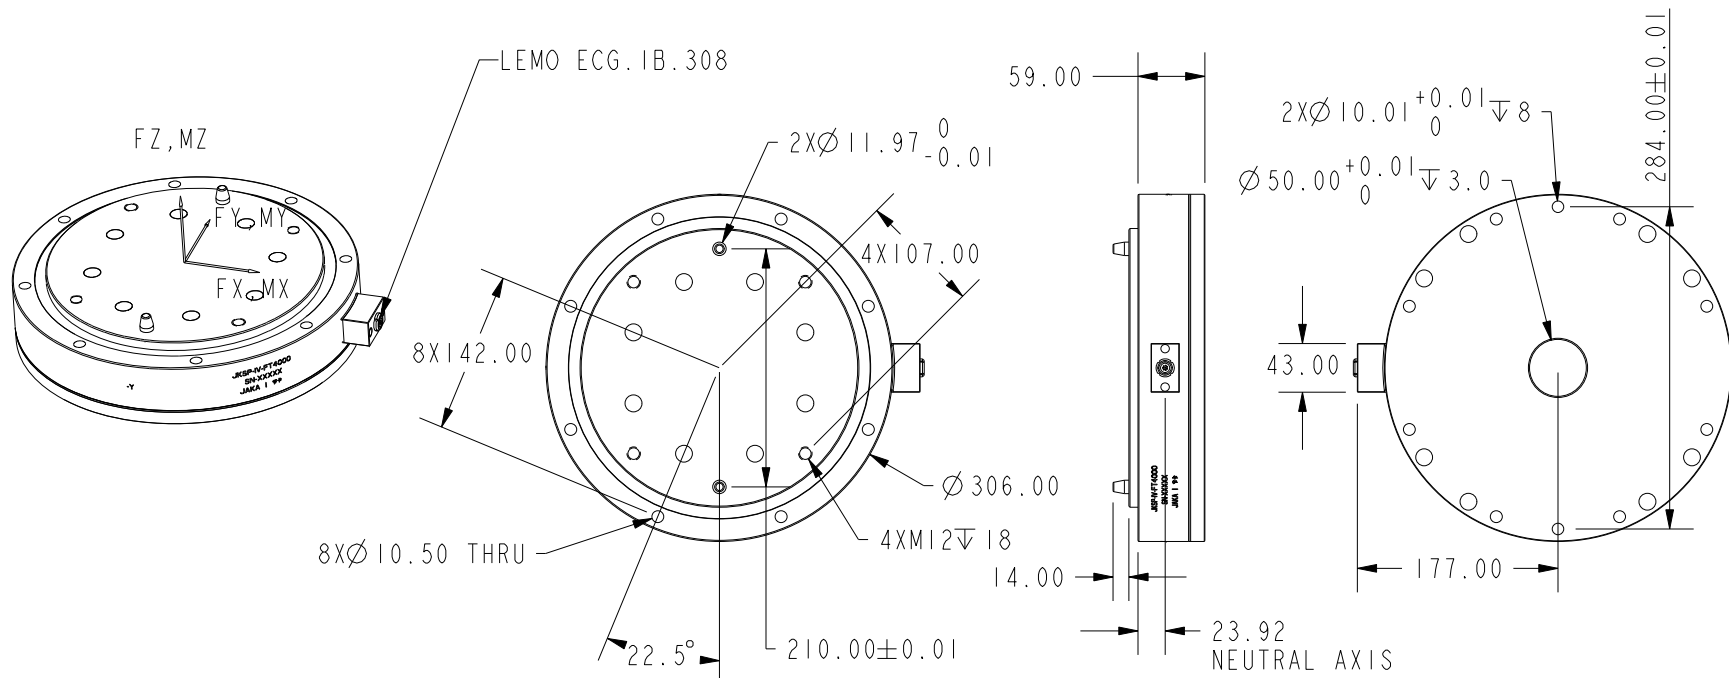

POSITIVE OUTPUT WHEN THE LOAD IS APPLIED TO THE TOOL SIDE
PER COORDINATE SYSTEM AS SHOWN

M3635D4 HAS INTERNAL AMPLIFIER AND DATA ACQUISITION SYSTEM.
THE SENSOR DIRECTLY COMMUNICATES WITH CONTROLLER
VIA ETHERNET AND RS232

	Fx	Fy	Fz	Mx	My	Mz
CAPACITY (N/Nm)	4000	4000	4000	3600	3600	3600
BRIDGE RES. (Ω)	350	350	350	350	350	350

CONNECTOR PIN ASSIGNMENT

PIN # / COLOR	FUNCTION	PIN # / COLOR	FUNCTION
1 BLUE	+24V	5 WHITE/GREEN	RDP
2 WHITE/BLUE	GND	6 GREEN	RDN
3 WHITE/ORANGE	TDP	7 WHITE/BROWN	RX
4 ORANGE	TDN	8 BROWN	TX

SPECIFICATIONS

POWER SUPPLY (V)	24V
OVERLOAD CAPACITY (%F.S.)	300
FREE AIR RESONANT FREQ. (HZ.)	3500
CROSSTALK (%F.S.)	2.5
NON-LINEARITY (%F.S.)	1.0
HYSTERESIS (%F.S.)	1.0
OPERATING TEMP. RANGE (°C)	-40 TO +90
COMPENSATED TEMP. RANGE (°C)	10 TO 70
MASS (KG)	21

SUNRISE INSTRUMENTS
www.srisensor.com

SIX AXIS ROBOT BASE LOAD CELL
D306MM F4000N, ETHERNET TCP

UNLESS OTHERWISE SPECIFIED
DIMENSIONS ARE IN MM

M3635D4B

REV.
B